


NO SPLIT ENDS.

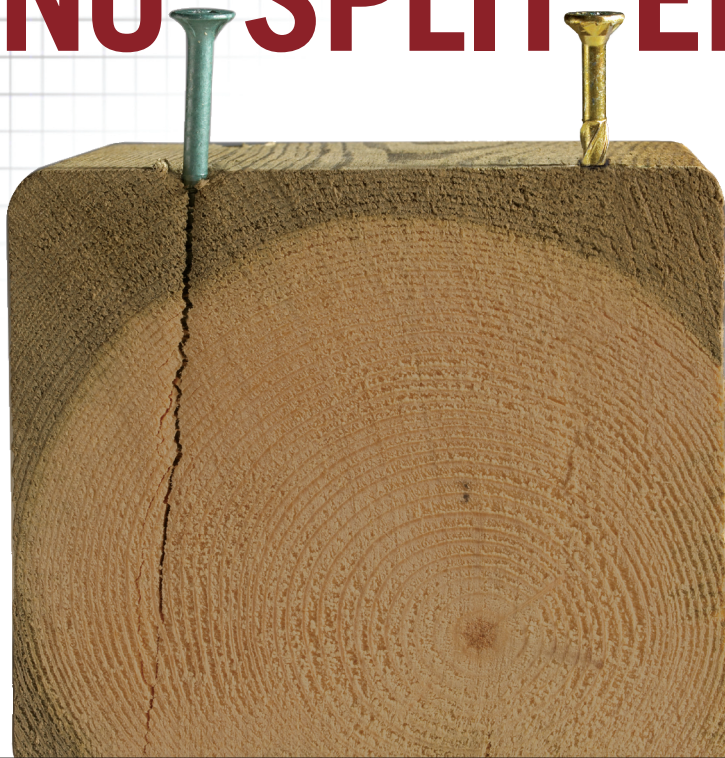

1/8" from the edge... Not that you should, but you could. If you're using the reengineered R4 you can get away with minor sins. Go ahead, put that R4 ridiculously close to the edge...and forget the pilot hole! That's what ÜberGrade is all about! But one word of caution — try this with a "pro-grade" fastener and you'll regret it.



 **GRKFASTENERS**
ÜberGrade™

THUNDER BAY, ONTARIO, CANADA
800/263-0463 - GRKFASTENERS.COM

© 2007 GRK Fasteners