


# Vinyl Window™ Screw


- W-Cut thread design to bite into wood studs.
- Tek Point drill tip for metal studs.
- Climatek™ coating to reduce the possibility of corrosion.
- Edge design under the head to capture the vinyl strap at penetration time.
- Patented washer-head design.

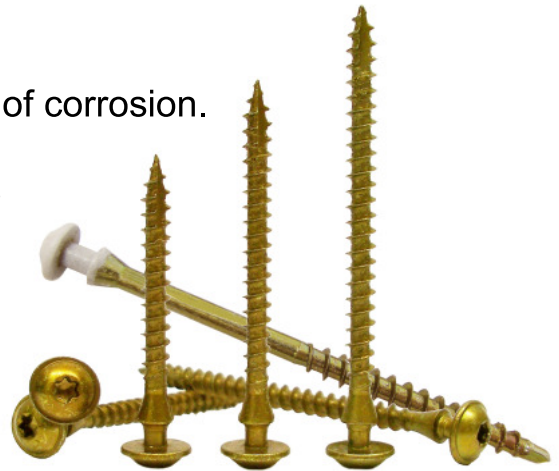


- patented -



1. Pre-drill window frame.

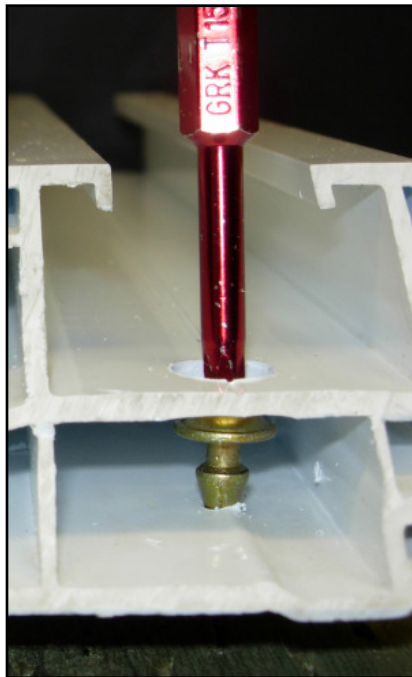

2. Insert screw.

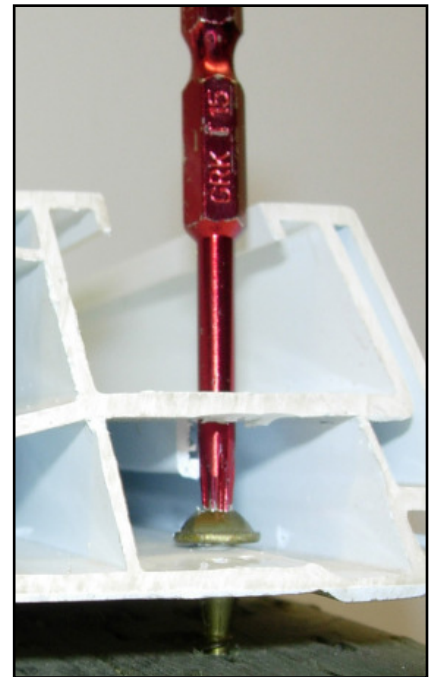

3. Lock collar and adjust.

VWS